


# PAB\_01V01

## Universal Connector

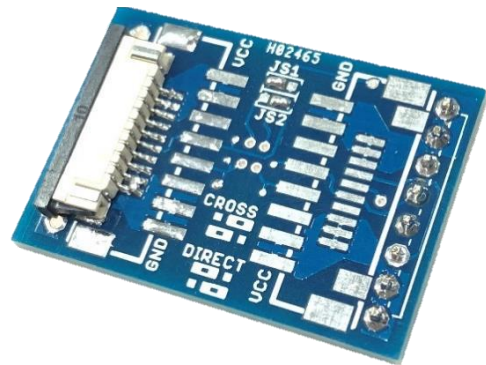

### Description

**Proculus Accessory Board Model 01** (PAB\_01) is a universal connector adaptor, intended to provide flexible physical connection between the various connection types used by Proculus LCMs.

PAB\_01 is provided in different variants, each with the adequate connectors for your application.

This board only converts between connector type. No electrical or protocol conversion.

### Features


- Makes connections between different connector types simple.
- RX and TX signals can be easily reversed by solder jumpers.
- Orderable in several different connector combinations.

### Applications

- Prototyping and testing.
- Development.

While PAB\_01 is primarily intended for **development** environments, it can be used in production runs.

### Simplified Diagram and Appearance

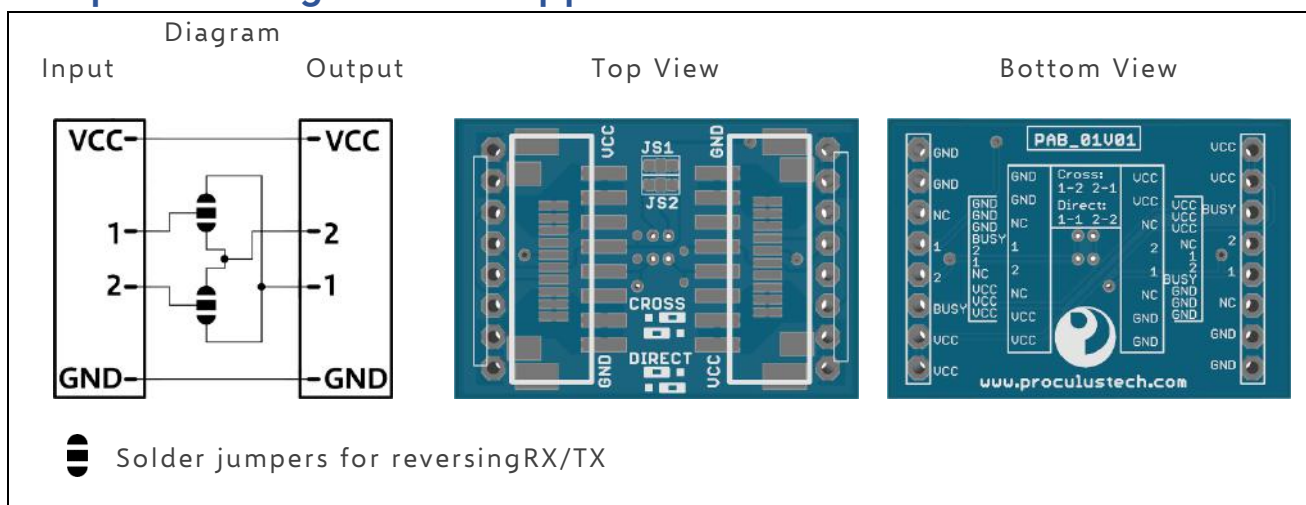

## Conventions used in this document

- The **Input Connector** is on the left side of the board.
- The **Output Connector** is on the right side of the board.
- The LCM is connected to the Input Connector.
- RX (receive) and TX (transmit) signals are, unless specified, respective to the LCM’s point of view. Considering this, signal 1 is RX and signal 2 is TX.

## Pinout

### Signal Description

Signal	Details
<b>VCC</b>	Supply Voltage
<b>GND</b>	Common Supply Ground
<b>1</b>	LCM <sup>(1)</sup> RX <sup>(2)</sup> or TX
<b>2</b>	LCM <sup>(1)</sup> TX <sup>(2)</sup> or RX
<b>NC</b>	Not Connected. Do not use this pin
<b>BUSY</b>	Not used on AD LCMs. Do not use this pin

**Note 1:** RX and TX naming, unless specified, refers to the LCM’s point of view.


**Note 2:** See chapter “RX/TX Connection Configuration” for defaults.

## FFC (Flat Flexible Cable) Connector




Caution


The FFC Cable contacts should be facing down (towards the board), with the blue tape facing up (away from the board), as shown in the picture.

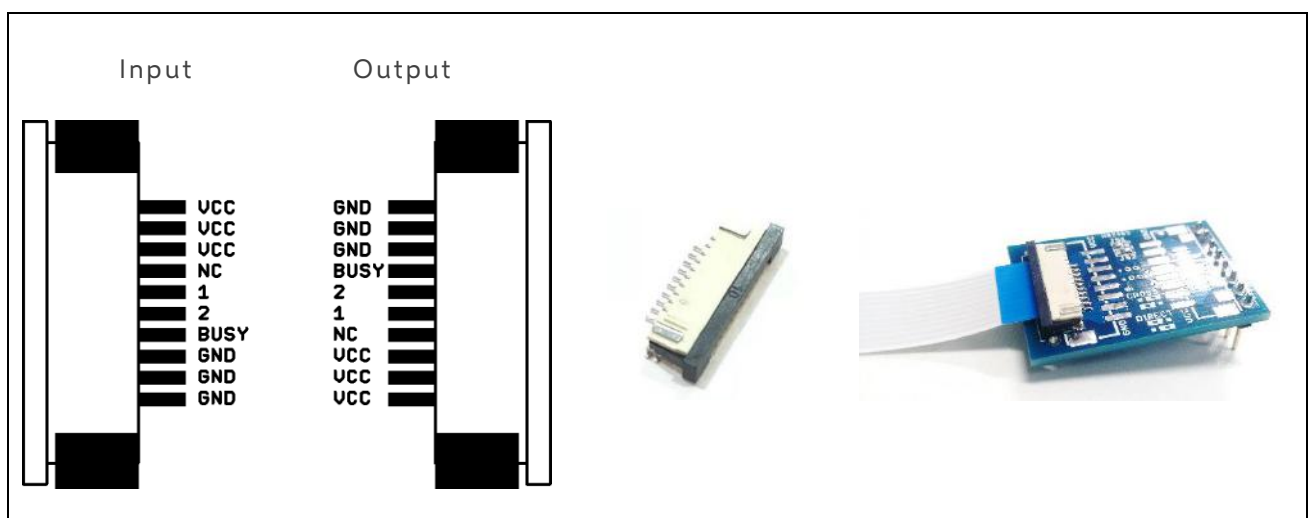

Ribbon Connector

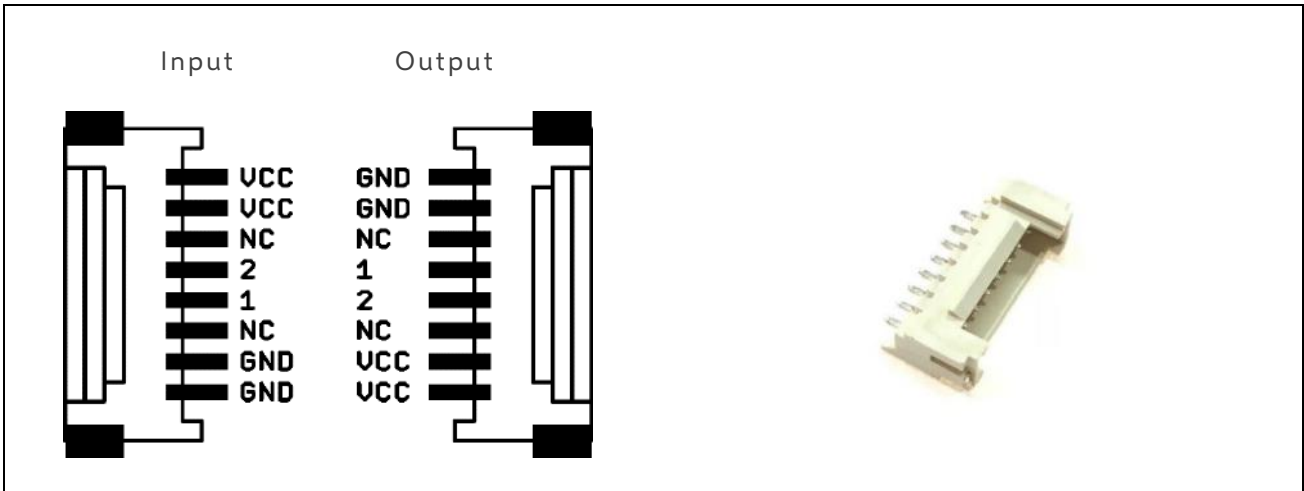

Pin Header Connector

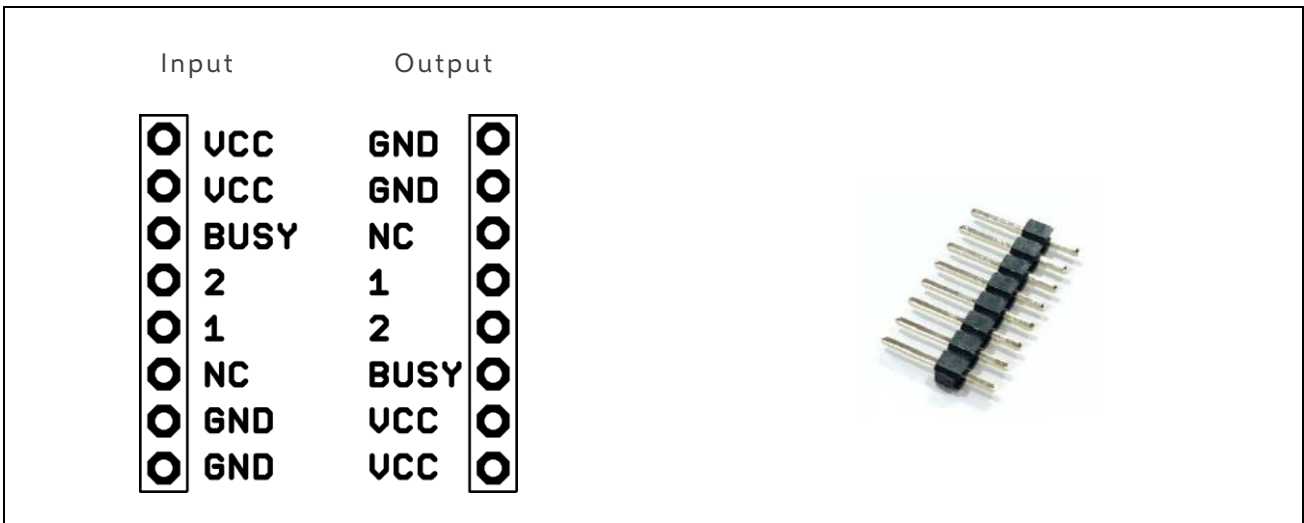

No Connector

No connectors available.

Wires can be soldered to the Pin Connector empty through-holes.

## Typical Applications

PAB\_01 is commonly used to:

- Connect the LCM to a breadboard or header
- Connect an LCM with a type of connector not compatible with the application board connector.
- Power a stand-alone LCM without a controlling board.
- Connect a USB/Serial converter to a microcontroller.

### Note

PAB\_01 is provided *as is* and doesn't necessarily comply to any certifications or standards. As such, we recommend PAB\_01 to be used **only for development purposes**.

## RX/TX Connection Configuration

When PAB\_01 is used to establish communication between an LCM and a microcontroller or USB/Serial converter, **signal 1** (or 2) from the **Input Connector** (conventionally, where the LCM is connected to) is tied to **signal 1** (or 2) from the **Output Connector**.

However, there are some cases where it's desirable to reverse this connection, making **signal 1** (or 2) from the **Input Connector** connect to **signal 2** (or 1) from the **Output Connector**.

For example, you might want to use PAB\_01 to connect two microcontrollers to one another. Or you might want to connect a USB/Serial converter to a microcontroller.

To deal with those scenarios, PAB\_01 has two solder jumpers used to select the connection configuration between signals 1 and 2 from input to output.

There are two configurations, **Direct** and **Cross**:

Direct		Cross	
Input Signal	Output Signal	Input Signal	Output Signal
1 (RX)	1 (RX)	1 (RX)	2 (TX)
2 (TX)	2 (TX)	2 (TX)	1 (RX)

The **default configuration**, Direct, is the most common, used to connect an LCM in the input to a microcontroller or breadboard in the output.

Solder jumpers **JS1** and **JS2** select the Connection Configuration:

Jumper	Configuration	
	Direct	Cross
JS1	Left	Right
JS2	Right	Left


## Ordering Information

### Connector Types

The following table describes the available connectors and their respective symbols.

Connector	Symbol	Details
<b>FFC (Flat Flexible Cable) Connector</b>	F	10-pin, 1.0 mm pitch, Dual contact
<b>Ribbon Cable Connector</b>	R	8-pin, 2.0 mm pitch
<b>Pin Header</b>	P	8-pin, 2.56 mm pitch, Straight
<b>No Connector</b>	N	None


### Part Number Selection

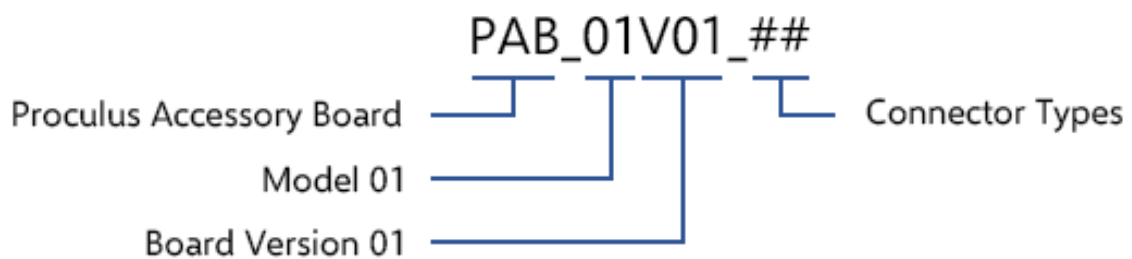

You can order PAB\_01 in any configuration of pre-assembled connector types. The following table lists part numbers for the most common (and readily available) configurations:

Connector Types	Input Connector	Output Connector
<b>PAB_01V01_FR</b>	FFC	Ribbon
<b>PAB_01V01_FP</b>	FFC	Pin Header
<b>PAB_01V01_FN</b>	FFC	No Connector
<b>PAB_01V01_RF</b>	Ribbon	FFC
<b>PAB_01V01_RP</b>	Ribbon	Pin Header
<b>PAB_01V01_RN</b>	Ribbon	No Connector

## Mechanical Information

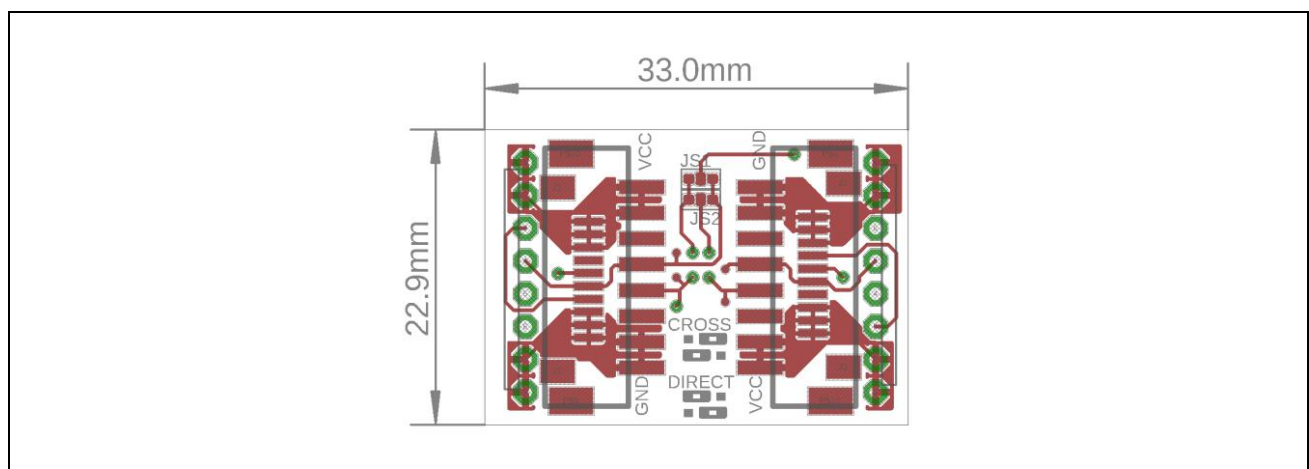

Dimensions are given in millimeters.

---

## Revision History

Revision Number	Revision Date	Description	Pages Changed
1	July 2018	Initial release.	-
2	July 2019	<ul style="list-style-type: none"><li>• Actual part numbers added in the "Part Number Selection" section.</li><li>• Minor grammatical corrections.</li><li>• Minor layout adjustments.</li><li>• Some pictures have been updated.</li></ul>	2, 3, 4, 5

**IMPORTANT NOTICE**

Proculus Technologies and its subsidiaries and partners reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to Proculus' terms and conditions of sale supplied at the time of order acknowledgment.

The contents of this document are subject to change without notice. All technical information in this document is for reference purposes only. System configurations and specifications in this document supersede all previous information received by the purchaser.

Proculus Technologies makes no representations that this document is complete, accurate or error-free and assumes no responsibility and will not be liable for any errors, omissions, damage or loss that might result from any use of this document, even if the information in the document is followed properly.

Reproduction of information in Proculus Technologies documents or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. Proculus Technologies is not responsible or liable for such altered documentation.

Proculus Technologies does not warrant or accept any liability whatsoever in respect of any products purchased through unauthorized sales channel.

Should customers purchase or use Proculus Technologies products for any unintended or unauthorized application, customers shall indemnify and hold Proculus Technologies and its representatives harmless against all claims, damages, expenses, and attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized application.

This document is not part of any sales contract between Proculus Technologies and a purchaser. This document shall in no way govern or modify any Terms and Conditions of Sale, which Terms and Conditions of Sale shall govern all conflicting information between the two documents.